


# T-06 Hot Cabinet

## 1. FUNCTIONS:

- 1.1 High temperature sterilize, UV lamp sterilize
- 1.2 Heat preservation, humidity preservation

## 2. PANEL:

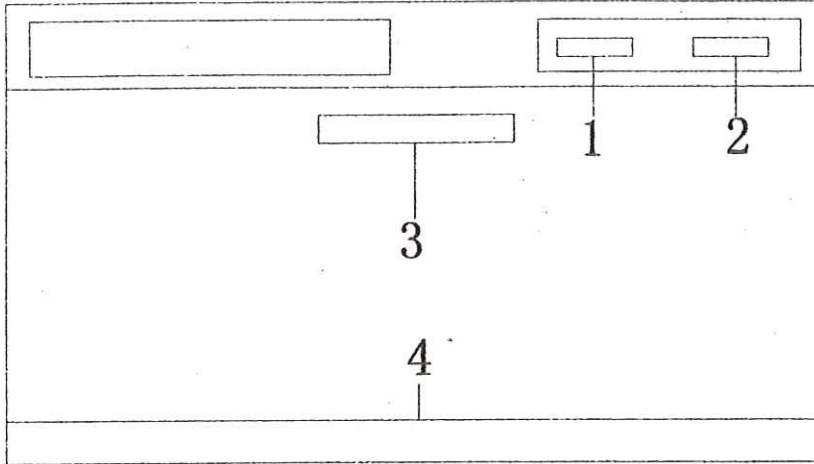

- (1). Lamp switch      (2). Power switch      (3). Door handle      (4). Water container

## 3. Operation

- 1. Take out the machine from the carton and connect to the local power.
- 2. Pull the handle to open the door of cabinet, put the towel into the cabinet, and close the door.
- 3. Turn on the power switch and then can going to the high temperature sterilize.
- 4. Turn on the UV lamp switch and the UV germicidal lamp if desired.

## 4. Work parameter and standard:

Model	Voltage	Power
T-06	110V~120V 60Hz <input type="checkbox"/>	220W
	220V~240V 50Hz <input type="checkbox"/>	

## 5. Basic elements

